

# Lynx 180B Zhukov Stock Mount Install Instructions



## Required Parts:

1. Lynx 180B Lower Receiver
2. Lynx 180B Zhukov Stock Mount
3. Magpul Zhukov Yugo AK Stock
4. 5mm Allen Wrench



- 1) Remove the buffer tube mount. Retain the mounting bolt and locating pins.



- 2) Insert the locating pins back into the receiver.






- 3) Using the mounting bolt from the buffer tube mount, install the Zhukov mount. Take care to align the mount vertically. Torque the mounting bolt to 30 in-lbs. You may find it helpful to test fit your upper receiver at this time. If it binds, loosen the mounting bolt, adjust the alignment, and re-torque.



- 4) Using the provided M6x25mm bolt, washer, and lock washer attach the Magpul Zhukov stock to the mount. Ensure the lock washer is between the standard washer and steel sling mount plate. The mounting bolt provided by Magpul is not used and will not fit. Torque the M6 bolt to 30 in-lbs.

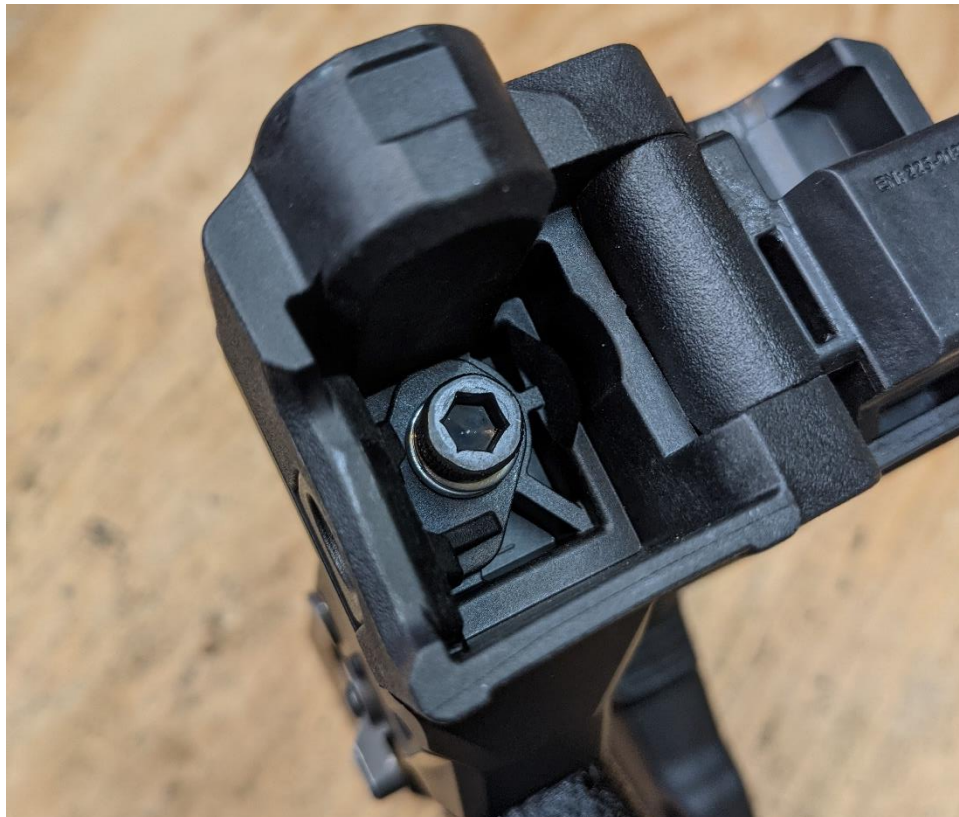

5) Function check the stock.

